



1000+

Partial List)

- | | | | | | |
|--|---|--|--|---|--|
| • Shim A/C Compressor | • Spring - Door Latch | • Switch - Electrical | • Transducer - EGR Back Pressure | • Valve Assembly - Brake | • Wiring Assembly - A/C |
| • Skid Control Module Rear | • Spring - Front | • Windshield Wiper | • Transducer - Hydraulic Pressure | • Valve Assembly - Brake M/C | • Blower Motor Feed |
| • Sleeve - Bearing | • Suspension Torsion | • Switch - Fuel Filter | • Transducer Assembly | • Valve Assembly - Cooling Control | • Wiring Assembly - Brake Skid |
| • Sleeve - Front Stabilizer Bar | • Spring - Gear Tensioner | • Switch - Ignition Anti-Theft | • Transfer Case Assembly | • Valve Assembly - Exhaust | • Wiring Assembly - Interior/Engine/Exterior |
| • Sleeve - Rear Stabilizer Bar | • Spring - Leaf Rear | • Switch - Pressure Warning | • Transfer Case Encoder/Shift Motor | • Valve Assembly - Fan | • Wiring Assembly - Radio |
| • Sleeve - Spacer Snap Ring | • Spring - Overrunning Clip | • Switch - Temp Control | • Transmission - Actuator Assembly | • Thermostat Control | • Worm - Parking Brake |
| • Sleeve - Transmission Oil Pressure Boost | • Spring - Parking Pawl | • Switch - Temp Control Valve | • Transmission - Bearing | • Valve Assembly - Fuel Selector | • Yoke - Driveshaft Center |
| • Sleeve Assembly - Clutch Ad | • Spring - Rear | • Switch - Turn Indicator | • Transmission - Control Cover | • Valve Assembly - Fuel Tank Vent | • Yoke - Shaft Support |
| • Sleeve Assembly - Rear Lube | • Suspension Torsion | • Switch - Vacuum Pump | • Transmission - Control Pivot | • Valve Assembly - Master Cylinder Control | • Yoke - Universal |
| • Sleeve/Ring Assembly Lockout | • Spring - Reverse Inhibitor | • Switch and Bracket Assembly - Tailgate | • Transmission - Mount | • Valve Assembly - Power Steering Control | |
| • Slide - Door Window Regulator | • Spring - Shift Bias | • Switch Assembly - Brake Warning | • Transmission - Oil Cooler Line | • Valve Assembly - Thermal Vent | |
| • Slide - Front/Rear Seat Track | • Spring - Tran G/Shift Lever | • Switch Assembly - Door Ajar | • Transmission - Oil Pump | • Valve Assembly - Trans Control | |
| • Slinger - Front/Rear Hub Oil | • Spring Assembly - Front | • Switch Assembly - Door Lock | • Transmission - Sun Gear | • Valve Assembly - Vacuum Check | |
| • Slip Yoke Assembly - Front Axle | • Spring Assembly - Rear | • Switch Assembly - Door Warning | • Transmission - Transmitter Remote Control | • Valve/Switch Assembly - Brake | |
| • Snap Ring - Countershaft | • Springs Slipper | • Switch Assembly - EGR | • Trip Minder Assembly | • Vane Sensor | |
| • Snap Ring - Synchronizer | • Sprocket - Crankshaft | • Switch Assembly - Elect Shift | • Tube - Fuel Injection | • Variable Assist Power Steering Module | |
| • Snap Ring - Transmission | • Sprocket - Lock Ring | • Switch Assembly - Fuel Tank | • Tube - Oil Level Indicator | • Variable Cam Timing Assembly | |
| • SNS and Transmission Assembly - Tire Press | • Starter Motor Assembly | • Switch Assembly - Gear Shift Neutral | • Tube - Turbo Air Outlet | • Vehicle Emergency Messaging Module Assembly | |
| | • Starter Motor Solenoid | • Switch Assembly - Lock Sensor | • Tube - Turbo Oil Return | • Vent - Rear Axle Housing | |
| | • Stationary Elevated Ride Control | • Switch Assembly - Parking Brake | • Tube - Turbo Oil Supply | • Venturi A/C Evaporator | |
| | • Steering Actuator Valve | • Switch Assembly - Pressure | • Tube Air Suspension | • Venturi Assembly A/C | |
| | • Steering Column Assembly | • Switch Assembly - Radio | • Tube Assembly - Oil Cooler | • Viscous Coupler/Flexible Coupler | |
| | • Steering Column Lock Actuator | • Switch Assembly - Speedometer | • Tube Vacuum Heat Valve | • Voltage Converter AC to DC | |
| | • Steering Column Lock Assembly | • Switch Assembly - Rear Axle | • Turbo Boost Gauge | • Washer - Crankshaft Pulley | |
| | • Steering Stop | • Switch Assembly - Window Regulator | • Turbo Discharge Pipe Gasket | • Washer - Front | |
| | • Steering Wheel Controls | • SYNC® Module | • Turbocharger/Supercharger Unit - Factory-Installed | • Suspension Lower | |
| | • Steering Worm Bearing Cup | • Synchronizer Assembly | • Two Speed Shaft Repair | • Water Bypass Pipe | |
| | • Stern A/C Clutch Switch | • TCM (Transmission Control Module) | • U-bolt - Rear Spring | • Water Outlet Connection | |
| | • Stop Assembly Rear Seat Back | • Temperature Indicator | • U-bolt - Universal Joint | • Water Pump | |
| | • Striker Rear Seat Latch | • Tensioner - Timing Chain | • Underbody Linkages and Couplings | • Wheel Cylinders | |
| | • Strut - Front Suspension Lower | • Thermistor/Temperature Sensor Probe | • Universal Joint | • Wheel Steering Assembly | |
| | • Subwoofer Assembly | • Thermostat Housing | • Vacuum Pump Gasket | • Window Crank Handle/Knob | |
| | • Sunroof/Discharge Assembly | • Throttle Valve Cable | • Vacuum Selector - Air Conditioner | • Windshield Wiper Motor | |
| | • Sunload Sensor | • Thrust Bearing | • Valve - A/C Comp Low Pressure | • Wiper Motor | |
| | • Support - Coupling Shaft Bearing | • Tie Rods Inner/Outer | • Valve - A/C Compressor Pressure | • Connector Grommet | |
| | • Support - Exhaust Pump | • Tie Rods Inner/Outer | • Valve - Anti-Backfire | • Wire - Power Steering Assist | |
| | • Support - Front/Rear Seat | • Timing Chain Tensioner | • Valve - Assembly H/L Cover | • Wire - Speaker System | |
| | • Support - Front/Rear Seat Belt Buckle | • Timing Chain Set | • Valve - Brake | • Wire Assembly - Front/Rear Seat Control | |
| | • Support - Rocker Arm | • Torque Arm Assembly | • Pressure Differential | • Wire Assembly - Neutral Switch | |
| | • Support - Turbocharger | • Torque Converter Assembly | • Valve - Brake Pressure Meter | • Wire Assembly - RPM Sensor | |
| | • Support Arm Assembly | • Torque Converter Pressure Valve | • Valve - Brake Sensor | • Wire Harness - A/C Fan | |
| | • Support Assembly - Drive | • Torque Converter Support | • Valve - Covers | • Wire Harness - Air Conditioner | |
| | • Support Assembly - Trans | • Torsion Bar - Front | • Valve - Door Vent | • Wiring - A/C Clutch | |
| | • Switch - A/C Comp Clutch | • Torsion Spring | • Valve - EGR Vacuum Control | • Wiring - A/C Control Switch | |
| | • Switch - A/C Pressure | • TPMS Sensor | • Valve - Fuel Sender Check | • Wiring - Engine Room | |
| | • Switch - A/C Temperature Control | • Track - Door Center | • Valve - Guide | • Wiring - Exterior | |
| | • Switch - Back-Up Light | • Track Front/Rear Seat Inner | • Valve - Lube Connector | • Wiring - Interior | |
| | • Switch - Brake Anti-Lock | • Track Front/Rear Seat Strap | • Valve - Main Oil Pressure | • Wiring - Radio Amplifier | |
| | • Switch - Brake Low Pressure | • Trailer Brake Module | • Valve - Throttle Center | | |
| | • Switch - Brake Pressure Warning | • Transceiver - Passive Anti Theft | • Valve - Throttle Pressure | | |
| | • Switch - Brake Traction Lock Control | • Transducer - EGR | • Valve - Transmission | | |
| | • Switch - Coolant Temp | | • Valve Assembly - Air Bypass | | |

- *Not offered*

DESCRIPTION	FORD	COMPETITIVE-MAKE	TIME/MILEAGE	ROADSIDE ASSISTANCE	RENTAL	INTEREST-FREE FINANCING
Components	✓	✓	New Plans: up to the earlier of 8 years or 150,000 miles. Used Plans: up to the earlier of 72 months or 75,000 miles.	✓	Standard	✓
Components Covered	✓	✓	New Plans: up to the earlier of 8 years or 150,000 miles. Used Plans: up to the earlier of 72 months or 75,000 miles.	✓	Standard	✓
Components	✓	✓	New Plans: up to the earlier of 8 years or 150,000 miles. Used Plans: up to the earlier of 72 months or 75,000 miles.	✓	Standard	✓
Components	✓	✓	New Plans: up to the earlier of 8 years or 150,000 miles. Used Plans: up to the earlier of 72 months or 75,000 miles.	✓	Standard	✓
Ford Protect Service Plan for Ford Certified Vehicles	✓	■	A variety of time and mileage options up to the earlier of 11 years or 140,000 miles.	✓	Standard	✓

CTION	FORD	COMPETITIVE-MAKE	TIME/MILEAGE	ROADSIDE ASSISTANCE	RENTAL	INTEREST-FREE FINANCING
Inspections, all maintenance, and cost of select	✓	✓	Plans available up to the earlier of 8 years or 150,000 miles.	■	Optional First-Day Rental	✓
Aftermarket, maintenance, and replacement, and	✓	✓	A variety of time and mileage options up to the earlier of 6 years or 100,000 miles.	■	■	✓
Aftermarket, maintenance, and replacement, and	✓	✓	A variety of time and mileage options up to the earlier of 6 years or 100,000 miles.	■	■	✓
Aftermarket change	✓	✓	A variety of time and mileage options up to the earlier of 6 years or 100,000 miles.	■	■	✓

20FLP-POBRCH-
64172 1194b

Printed in the U

November 2



Premium/Extra
Maintenance Plan

Our most comprehensive maintenance plan covers:

- Engine Oil and Filter Changes
- Multi-Point Inspections
- Tire Rotations
- Replacement of Brake Pads and Linings When Worn
- Shock Absorbers/Struts
- Spark Plugs
- Clutch Discs
- Engine Belts
- Wiper Blades
- Diesel Exhaust Fluid Fill at the Time Scheduled Maintenance Is Performed at Dealership (If Necessary)

Essential
Maintenance Plans

Plan ahead now and protect yourself against rising maintenance costs with this affordable array of standard service items for your vehicle:

- Limited Maintenance covers lube/oil/filter, tire rotation, diesel exhaust fluid refill at service interval, multi-point inspection
- Basic Maintenance covers lube/oil/filter, tire rotation, multi-point inspection
- Engine Maintenance covers lube/oil/filter only

Diesel EngineCARE
Covers 13 Critical
Powertrain Components

- All Internally Lubricated Parts
- Cylinder Block
- Cylinder Heads
- Oil Pump
- Timing Chain Cover
- Timing Chain (Gears or Belt)
- Turbocharger (Factory-Installed)
- Cylinder Head Gasket
- Crankcase Oil Cooler
- EGR Cooler
- Fuel Injection Pump
- Fuel Injection Pressure Regulator
- Fuel Injectors

Diesel EngineCARE Plus
Covers 21 Critical
Powertrain Components

- All Internally Lubricated Parts
- Cylinder Block
- Cylinder Heads
- Oil Pump
- Oil Pan
- Timing Chain Cover
- Timing Chain (Gears or Belt)
- Turbocharger (Factory-Installed)
- Thermostat
- Thermostat Housing
- Water Pump
- Flywheel
- Exhaust (Manifold and Bolts)
- Intake (Manifold and Bolts)
- Seals and Gaskets (Includes Cylinder Head Gasket)
- Valve Covers
- Crankcase Oil Cooler
- EGR Cooler
- Fuel Injection Pump
- Fuel Injection Pressure Regulator
- Fuel Injectors

PowertrainCARE
Covers 29 Critical
Powertrain Components

- All Internally Lubricated Parts (Engine)
- Axle Shafts (Front- and Rear-Wheel-Drive Axle)
- Cylinder Block
- Cylinder Heads
- Drive Axle Housing and Front Axle Housing for 4x4 (Including All Internal Parts)
- Driveshaft
- Exhaust (Manifold and Bolts)
- Final Drive Housing and Rear Axle Housing for AWD (Including All Internal Parts)
- Flywheel
- Locking Rings (Four-Wheel Drive)
- Intake (Manifold and Bolts)
- Oil Pan
- Oil Pump
- Seals and Gaskets (Engine)
- Seals and Gaskets (Front- and Rear-Wheel-Drive Axle)
- Seals and Gaskets (Transmission)
- Thermostat
- Thermostat Housing
- Timing Chain (Gears or Belt)
- Timing Chain Cover
- Torque Converter
- Transfer Case (Including All Internal Parts)
- Transmission Case (Including All Internal Parts)
- Turbocharger/Supercharger Unit (Factory-Installed)
- Universal and Constant Velocity Joints (Front- and Rear-Wheel-Drive Axle)
- Valve Covers
- Viscous Coupler/Flexible Coupler
- Water Pump

PowertrainCARE
Covers 29 Critical
Powertrain Components

- All Internally Lubricated Parts (Engine)
- Axle Shafts (Front- and Rear-Wheel-Drive Axle)
- Cylinder Block
- Cylinder Heads
- Drive Axle Housing and Front Axle Housing for 4x4 (Including All Internal Parts)
- Driveshaft
- Exhaust (Manifold and Bolts)
- Final Drive Housing and Rear Axle Housing for AWD (Including All Internal Parts)
- Flywheel
- Locking Rings (Four-Wheel Drive)
- Intake (Manifold and Bolts)
- Oil Pan
- Oil Pump
- Seals and Gaskets (Engine)
- Seals and Gaskets (Front- and Rear-Wheel-Drive Axle)
- Seals and Gaskets (Transmission)
- Thermostat
- Thermostat Housing
- Timing Chain (Gears or Belt)
- Timing Chain Cover
- Torque Converter
- Transfer Case (Including All Internal Parts)
- Transmission Case
- Turbocharger/Supercharger Unit (Factory-Installed)
- Underbody Linkages and Couplings

PowertrainCARE
Covers 29 Critical
Powertrain Components

- All Internally Lubricated Parts (Engine)
- Axle Shafts (Front- and Rear-Wheel-Drive Axle)
- Cylinder Block
- Cylinder Heads
- Drive Axle Housing and Front Axle Housing for 4x4 (Including All Internal Parts)
- Driveshaft
- Exhaust (Manifold and Bolts)
- Final Drive Housing and Rear Axle Housing for AWD (Including All Internal Parts)
- Flywheel
- Locking Rings (Four-Wheel Drive)
- Intake (Manifold and Bolts)
- Oil Pan
- Oil Pump
- Seals and Gaskets (Engine)
- Seals and Gaskets (Front- and Rear-Wheel-Drive Axle)
- Seals and Gaskets (Transmission)
- Thermostat
- Thermostat Housing
- Timing Chain (Gears or Belt)
- Timing Chain Cover
- Torque Converter
- Transfer Case (Including All Internal Parts)
- Transmission Case
- Turbocharger/Supercharger Unit (Factory-Installed)
- Underbody Linkages and Couplings

PowertrainCARE
Covers 29 Critical
Powertrain Components

- All Internally Lubricated Parts (Engine)
- Axle Shafts (Front- and Rear-Wheel-Drive Axle)
- Cylinder Block
- Cylinder Heads
- Drive Axle Housing and Front Axle Housing for 4x4 (Including All Internal Parts)
- Driveshaft
- Exhaust (Manifold and Bolts)
- Final Drive Housing and Rear Axle Housing for AWD (Including All Internal Parts)
- Flywheel
- Locking Rings (Four-Wheel Drive)
- Intake (Manifold and Bolts)
- Oil Pan
- Oil Pump
- Seals and Gaskets (Engine)
- Seals and Gaskets (Front- and Rear-Wheel-Drive Axle)
- Seals and Gaskets (Transmission)
- Thermostat
- Thermostat Housing
- Timing Chain (Gears or Belt)
- Timing Chain Cover
- Torque Converter
- Transfer Case (Including All Internal Parts)
- Transmission Case
- Turbocharger/Supercharger Unit (Factory-Installed)
- Underbody Linkages and Couplings

PowertrainCARE
Covers 29 Critical
Powertrain Components

- All Internally Lubricated Parts (Engine)
- Axle Shafts (Front- and Rear-Wheel-Drive Axle)
- Cylinder Block
- Cylinder Heads
- Drive Axle Housing and Front Axle Housing for 4x4 (Including All Internal Parts)
- Driveshaft
- Exhaust (Manifold and Bolts)
- Final Drive Housing and Rear Axle Housing for AWD (Including All Internal Parts)
- Flywheel
- Locking Rings (Four-Wheel Drive)
- Intake (Manifold and Bolts)
- Oil Pan
- Oil Pump
- Seals and Gaskets (Engine)
- Seals and Gaskets (Front- and Rear-Wheel-Drive Axle)
- Seals and Gaskets (Transmission)
- Thermostat
- Thermostat Housing
- Timing Chain (Gears or Belt)
- Timing Chain Cover
- Torque Converter
- Transfer Case (Including All Internal Parts)
- Transmission Case
- Turbocharger/Supercharger Unit (Factory-Installed)
- Underbody Linkages and Couplings

PowertrainCARE
Covers 29 Critical
Powertrain Components

- All Internally Lubricated Parts (Engine)
- Axle Shafts (Front- and Rear-Wheel-Drive Axle)
- Cylinder Block
- Cylinder Heads
- Drive Axle Housing and Front Axle Housing for 4x4 (Including All Internal Parts)
- Driveshaft
- Exhaust (Manifold and Bolts)
- Final Drive Housing and Rear Axle Housing for AWD (Including All Internal Parts)
- Flywheel
- Locking Rings (Four-Wheel Drive)
- Intake (Manifold and Bolts)
- Oil Pan
- Oil Pump
- Seals and Gaskets (Engine)
- Seals and Gaskets (Front- and Rear-Wheel-Drive Axle)
- Seals and Gaskets (Transmission)
- Thermostat
- Thermostat Housing
- Timing Chain (Gears or Belt)
- Timing Chain Cover
- Torque Converter
- Transfer Case (Including All Internal Parts)
- Transmission Case
- Turbocharger/Supercharger Unit (Factory-Installed)
- Underbody Linkages and Couplings

PowertrainCARE
Covers 29 Critical
Powertrain Components

- All Internally Lubricated Parts (Engine)
- Axle Shafts (Front- and Rear-Wheel-Drive Axle)
- Cylinder Block
- Cylinder Heads
- Drive Axle Housing and Front Axle Housing for 4x4 (Including All Internal Parts)
- Driveshaft
- Exhaust (Manifold and Bolts)
- Final Drive Housing and Rear Axle Housing for AWD (Including All Internal Parts)
- Flywheel
- Locking Rings (Four-Wheel Drive)
- Intake (Manifold and Bolts)
- Oil Pan
- Oil Pump
- Seals and Gaskets (Engine)
- Seals and Gaskets (Front- and Rear-Wheel-Drive Axle)
- Seals and Gaskets (Transmission)
- Thermostat
- Thermostat Housing
- Timing Chain (Gears or Belt)
- Timing Chain Cover
- Torque Converter
- Transfer Case (Including All Internal Parts)
- Transmission Case
- Turbocharger/Supercharger Unit (Factory-Installed)
- Underbody Linkages and Couplings

PowertrainCARE
Covers 29 Critical
Powertrain Components

- All Internally Lubricated Parts (Engine)
- Axle Shafts (Front- and Rear-Wheel-Drive Axle)
- Cylinder Block
- Cylinder Heads
- Drive Axle Housing and Front Axle Housing for 4x4 (Including All Internal Parts)
- Driveshaft
- Exhaust (Manifold and Bolts)
- Final Drive Housing and Rear Axle Housing for AWD (Including All Internal Parts)
- Flywheel
- Locking Rings (Four-Wheel Drive)
- Intake (Manifold and Bolts)
- Oil Pan
- Oil Pump
- Seals and Gaskets (Engine)
- Seals and Gaskets (Front- and Rear-Wheel-Drive Axle)
- Seals and Gaskets (Transmission)
- Thermostat
- Thermostat Housing
- Timing Chain (Gears or Belt)
- Timing Chain Cover
- Torque Converter
- Transfer Case (Including All Internal Parts)
- Transmission Case
- Turbocharger/Supercharger Unit (Factory-Installed)
- Underbody Linkages and Couplings

PowertrainCARE
Covers 29 Critical
Powertrain Components

- All Internally Lubricated Parts (Engine)
- Axle Shafts (Front- and Rear-Wheel-Drive Axle)
- Cylinder Block
- Cylinder Heads
- Drive Axle Housing and Front Axle Housing for 4x4 (Including All Internal Parts)
- Driveshaft
- Exhaust (Manifold and Bolts)
- Final Drive Housing and Rear Axle Housing for AWD (Including All Internal Parts)
- Flywheel
- Locking Rings (Four-Wheel Drive)
- Intake (Manifold and Bolts)
- Oil Pan
- Oil Pump
- Seals and Gaskets (Engine)
- Seals and Gaskets (Front- and Rear-Wheel-Drive Axle)
- Seals and Gaskets (Transmission)
- Thermostat
- Thermostat Housing
- Timing Chain (Gears or Belt)
- Timing Chain Cover
- Torque Converter
- Transfer Case (Including All Internal Parts)
- Transmission Case
- Turbocharger/Supercharger Unit (Factory-Installed)
- Underbody Linkages and Couplings

PowertrainCARE
Covers 29 Critical
Powertrain Components

- All Internally Lubricated Parts (Engine)
- Axle Shafts (Front- and Rear-Wheel-Drive Axle)
- Cylinder Block
- Cylinder Heads
- Drive Axle Housing and Front Axle Housing for 4x4 (Including All Internal Parts)
- Driveshaft
- Exhaust (Manifold and Bolts)
- Final Drive Housing and Rear Axle Housing for AWD (Including All Internal Parts)
- Flywheel
- Locking Rings (Four-Wheel Drive)
- Intake (Manifold and Bolts)
- Oil Pan
- Oil Pump
- Seals and Gaskets (Engine)
- Seals and Gaskets (Front- and Rear-Wheel-Drive Axle)
- Seals and Gaskets (Transmission)
- Thermostat
- Thermostat Housing
- Timing Chain (Gears or Belt)
- Timing Chain Cover
- Torque Converter
- Transfer Case (Including All Internal Parts)
- Transmission Case
- Turbocharger/Supercharger Unit (Factory-Installed)
- Underbody Linkages and Couplings

PowertrainCARE
Covers 29 Critical
Powertrain Components

- All Internally Lubricated Parts (Engine)
- Axle Shafts (Front- and Rear-Wheel-Drive Axle)
- Cylinder Block
- Cylinder Heads
- Drive Axle Housing and Front Axle Housing for 4x4 (Including All Internal Parts)
- Driveshaft
- Exhaust (Manifold and Bolts)
- Final Drive Housing and Rear Axle Housing for AWD (Including All Internal Parts)
- Flywheel
- Locking Rings (Four-Wheel Drive)
- Intake (Manifold and Bolts)
- Oil Pan
- Oil Pump
- Seals and Gaskets (Engine)
- Seals and Gaskets (Front- and Rear-Wheel-Drive Axle)
- Seals and Gaskets (Transmission)
- Thermostat
- Thermostat Housing
- Timing Chain (Gears or Belt)
- Timing Chain Cover
- Torque Converter
- Transfer Case (Including All Internal Parts)
- Transmission Case
- Turbocharger/Supercharger Unit (Factory-Installed)
- Underbody Linkages and Couplings

PowertrainCARE
Covers 29 Critical
Powertrain Components

- All Internally Lubricated Parts (Engine)
- Axle Shafts (Front- and Rear-Wheel-Drive Axle)
- Cylinder Block
- Cylinder Heads
- Drive Axle Housing and Front Axle Housing for 4x4 (Including All Internal Parts)
- Driveshaft
- Exhaust (Manifold and Bolts)
- Final Drive Housing and Rear Axle Housing for AWD (Including All Internal Parts)
- Flywheel
- Locking Rings (Four-Wheel Drive)
- Intake (Manifold and Bolts)
- Oil Pan
- Oil Pump
- Seals and Gaskets (Engine)
- Seals and Gaskets (Front- and Rear-Wheel-Drive Axle)
- Seals and Gaskets (Transmission)
- Thermostat
- Thermostat Housing
- Timing Chain (Gears or Belt)
- Timing Chain Cover
- Torque Converter
- Transfer Case (Including All Internal Parts)
- Transmission Case
- Turbocharger/Supercharger Unit (Factory-Installed)
- Underbody Linkages and Couplings

PowertrainCARE
Covers 29 Critical
Powertrain Components

- All Internally Lubricated Parts (Engine)
- Axle Shafts (Front- and Rear-Wheel-Drive Axle)
- Cylinder Block
- Cylinder Heads
- Drive Axle Housing and Front Axle Housing for 4x4 (Including All Internal Parts)
- Driveshaft
- Exhaust (Manifold and Bolts)
- Final Drive Housing and Rear Axle Housing for AWD (Including All Internal Parts)
- Flywheel
- Locking Rings (Four-Wheel Drive)
- Intake (Manifold and Bolts)
- Oil Pan
- Oil Pump
- Seals and Gaskets (Engine)
- Seals and Gaskets (Front- and Rear-Wheel-Drive Axle)
- Seals and Gaskets (Transmission)
- Thermostat
- Thermostat Housing
- Timing Chain (Gears or Belt)
- Timing Chain Cover
- Torque Converter
- Transfer Case (Including All Internal Parts)
- Transmission Case
- Turbocharger/Supercharger Unit (Factory-Installed)
- Underbody Linkages and Couplings

PowertrainCARE
Covers 29 Critical
Powertrain Components

- All Internally Lubricated Parts (Engine)
- Axle Shafts (Front- and Rear-Wheel-Drive Axle)
- Cylinder Block
- Cylinder Heads
- Drive Axle Housing and Front Axle Housing for 4x4 (Including All Internal Parts)
- Driveshaft
- Exhaust (Manifold and Bolts)
- Final Drive Housing and Rear Axle Housing for AWD (Including All Internal Parts)
- Flywheel
- Locking Rings (Four-Wheel Drive)
- Intake (Manifold and Bolts)
- Oil Pan
- Oil Pump
- Seals and Gaskets (Engine)
- Seals and Gaskets (Front- and Rear-Wheel-Drive Axle)
- Seals and Gaskets (Transmission)
- Thermostat
- Thermostat Housing
- Timing Chain (Gears or Belt)
- Timing Chain Cover
- Torque Converter
- Transfer Case (Including All Internal Parts)
- Transmission Case
- Turbocharger/Supercharger Unit (Factory-Installed)
- Underbody Linkages and Couplings

Ford Protect PremiumCARE extended service plan is so comprehensive, it's easier to refer you to what isn't covered — here are some examples:

Generally Covered by Your Auto Insurance —
Examples include: fixed (non-moving) body parts, bumpers, glass, moldings, ornamentation, paint, rust, sheet metal, structural underbody framework, side and rearview mirrors (glass and housing), water leaks, wind noise, weather strips, wheels, wheel studs, wheel covers, convertible top and bow.

Repairs Related to Your Maintenance Requirements —
Items listed in your vehicles owner guide such as: batteries of all types and cables, belts, hoses, hose clamps, brakes (front hub, drums, shoes, linings, disc rotors, pads), manual transmission clutch disc, exhaust system (includes catalytic converter), spark plugs, squeaks, rattles, tires, wheel balancing, wheel alignment, all lamps and lights (LED and HID lights, bulbs, sealed beam and lenses) except when purchased with New or Incomplete PremiumCARE Interior/Exterior Lighting Option, fogging of lamp assemblies, shock absorbers, service adjustments and cleaning.

Other Components and Repairs — Fabric, liners, fasteners, carpets, dash pad, wiper blades, knobs, trim, upholstery, physical damage or cosmetic issues, repairs covered by manufacturer recalls, any insurance or if the vehicle is within the time and mileage limits of any warranty, repairs caused by improper unreasonable use, unauthorized alterations or modifications of the vehicle, repairs caused by lack of required or recommended maintenance, and scheduled maintenance services. Costs or expenses for the towdown, rental expense, inspection or diagnosis of failures not covered by this Agreement. Refer to contract for details.

*Interior/Exterior Lighting — coverage included only if Lighting Option is purchased.